

To reset the printer to its factory default settings, hold down the FEED button until the error LED has completed its FOURTH set of flashes. You can then reset any changes that you had to make initially when first using the printer.

Halda inni feed takkanum og kveikja á prentaranum. Sleppa takkanum þegar hann er búinn með fjórða settið af blikki og sleppa honum áður en 5. settið byrjar.